

**TOOLS NEEDED:**

NONE

**PARTS INCLUDED:**

1 PRE-ASSEMBLED FOLDING CHAIR

**HARDWARE:**

NONE



There is a lock block attached to the bottom of each side of the seat assembly. (See arrow on picture) Turn the lock block about 1" so that it prevents the legs from folding. This is a safety mechanism designed to prevent the chair from prematurely collapsing.



**TO UNFOLD:** With one hand on the back and one hand on the front seat board, pull the chair until it fully extends into a standing chair. Place lock blocks into lock position. (See box above)

**CARE INSTRUCTIONS**

Your new furniture requires very little maintenance. It may be washed with a mild detergent and water to remove surface dust and dirt. After prolonged exposure to the elements you may want to refinish it. We recommend lightly sanding it prior to refinishing, then use a cloth to remove the dust, refinish with a high quality exterior finish. It may be necessary at times to tighten the bolts and screws. It is normal for bolts to loosen somewhat in wood furniture. In northern climates, we recommend that the furniture be stored inside during the winter months.

**LIMITED WARRANTY**

This product is warranted only against defects in materials and workmanship for one year following the date of purchase. This limited warranty is in lieu of all other warranties, expressed or implied, and no one is authorized to assume for the company any other liability in connection with their sale of this product. This warranty gives you specific rights and you may also have other rights, which vary, from state to state.