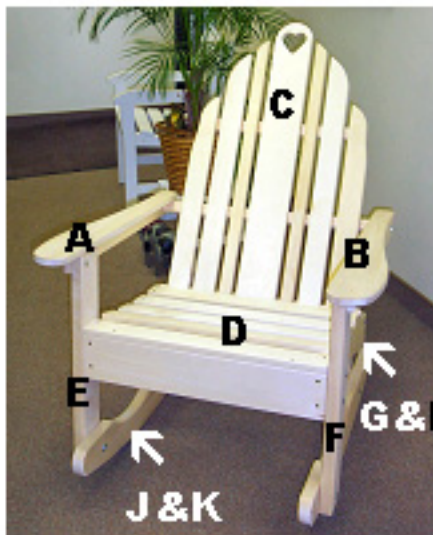


**PARTS INCLUDED:**

- 2 Arms - A & B
- Pre-Assembled Back C
- Pre-Assembled Seat D
- 2 Front Legs - E & F
- 2 Rear Legs - G & H (angled)
- 2 Rockers - J & K

**TOOLS NEEDED:**

- 7/16" or adjustable wrench
- Phillips Head Screwdriver

**HARDWARE:**

- 12 - 3" Carriage bolts
- 2 - 2 1/2" Carriage Bolts
- 2 - 2" Hex Lag Screws
- 16 - Washers
- 14 - Nuts
- 2 - 1 5/8" Phillips Head Wood Screws
- 2 - 2 1/4" Phillips Head Wood Screws

**ASSEMBLY TIP:** For ease of assembly, finger tighten all fasteners first. Tighten securely after all parts are aligned. Do not over tighten. Holes are drilled to easily accept hardware. However, because of finish the holes may be tighter than normal. Lightly tapping the hardware with a hammer will help with the assembly. Using some soap on the screws will make the job a little easier.



1. Attach front legs (E & F) to seat assembly (D) by placing 4 - 3" carriage bolts through holes in E & F (2 each - outside to inside). Attach to D with washers and nuts. The remaining hole in the leg should be above the seat towards the front of chair.



2. Attach rear legs (G & H) by placing the legs inside the seat assembly (D) with angle up. Attach each with 2 - 3" carriage bolts fasten with washer and nut.



3. After both the front and back legs are attached, the next step is to attach the rocker parts (J & K). Fasten the rockers (J & K) on the inside using 2 - 3" carriage bolts, washers, and nuts to each leg.



4. Place back assembly (C) into position with lower rail between rear legs and back slat on seat and resting against angle on rear legs (this may fit tightly). Fasten bottom rail of back to seat assembly (D) with 2 - 1 5/8" screws through predrilled holes. Attach back assembly (C) to rear legs with 2 - 2 1/4" screws through predrilled holes in rear legs.



5. Attach arms (A & B) to front legs (E & F) using 2 - 2 1/2" carriage bolts (1 each). Bolt heads should be on the inside of the arms. Fasten with washers and nuts. Braces should be on the outside of the leg. Attach arms to back rail with 2 - 2" (1 each) hex lag screws with washers through predrilled holes in back assembly. Securely tighten all nuts and bolts.

**CARE INSTRUCTIONS**

Your new furniture requires very little maintenance. It may be washed with a mild detergent and water to remove surface dust and dirt. After prolonged exposure to the elements you may want to refinish it. We recommend lightly sanding it prior to refinishing, then use a cloth to remove the dust, refinish with a high quality exterior finish. It may be necessary at times to tighten the bolts and screws. It is normal for bolts to loosen somewhat in wood furniture. In northern climates, we recommend that the furniture be stored inside during the winter months.

**LIMITED WARRANTY**

This product is warranted only against defects in materials and workmanship for one year following the date of purchase. This limited warranty is in lieu of all other warranties, expressed or implied, and no one is authorized to assume for the company any other liability in connection with their sale of this product. This warranty gives you specific rights and you may also have other rights, which vary, from state to state.